

Post Wrap Components: Post Wrap (4 snap-together pieces)

Tools Required for Installation:  
tape measure, saw, white rubber mallet  
and PVC fence glue.

Post Wraps will accommodate the following post sizes:

Post Wrap Size	Inside Width	Largest Square Post	Largest Round Post
4" x 4" x 10'	3 1/4" - 4"	4"	4 1/2"
6" x 6" x 10'	5 1/8" - 6"	6"	6 1/2"

Note: Treated wood posts vary in size and may have to be adjusted before installation of Post Wrap.

1. Measure opening to determine Post Wrap length.

2. Trim Post Wrap sections to desired length.

3. Snap together (2) pieces of the Post Wrap. Start installation at one end and continue entire length. If necessary a white rubber mallet can be used to tap the pieces into place. (Make sure to use the same channel on each Post Wrap section as you snap them together.) SEE FIGURE 1.

4. Position the Post Wrap around the post.

5. Snap together the third piece of Post Wrap. SEE FIGURE 2.

6. Snap together the fourth piece of Post Wrap to complete installation. SEE FIGURE 3

Note: If installing around a round post, a toe-nailing attachment or "L" bracket attachment into the soffit and floor can be used to keep the installed Post Wrap from moving. A Trim Kit should be used to cover screws or brackets.

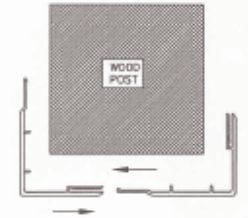


Figure 1

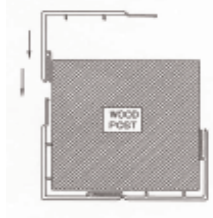


Figure 2



Cross Section

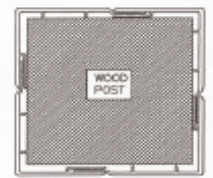


Figure 3

### TRIM KIT INSTALLATION INSTRUCTIONS (Sold Separately)

Parts Included: (8) Snap Together Trim Pieces (Top and Bottom)

1. After Post Wrap is installed, snap (4) trim pieces around the top and (4) trim pieces around the bottom of Post Wrap snugly. Trim pieces can be cut to accommodate the size of the installed Post Wrap.
2. PVC fence glue can be applied to hold the Trim Kits into place at the top and bottom of the Post Wrap.

### Post Wrap Trim Kits

Use snap-together Trim Kits with Post Wraps.

